




# COOKTOP PARTS

For Models: RF264LXSQ3, RF264LXSB3  
(Designer White) (Black)

30" ELECTRIC FREESTANDING  
SELF CLEAN RANGE

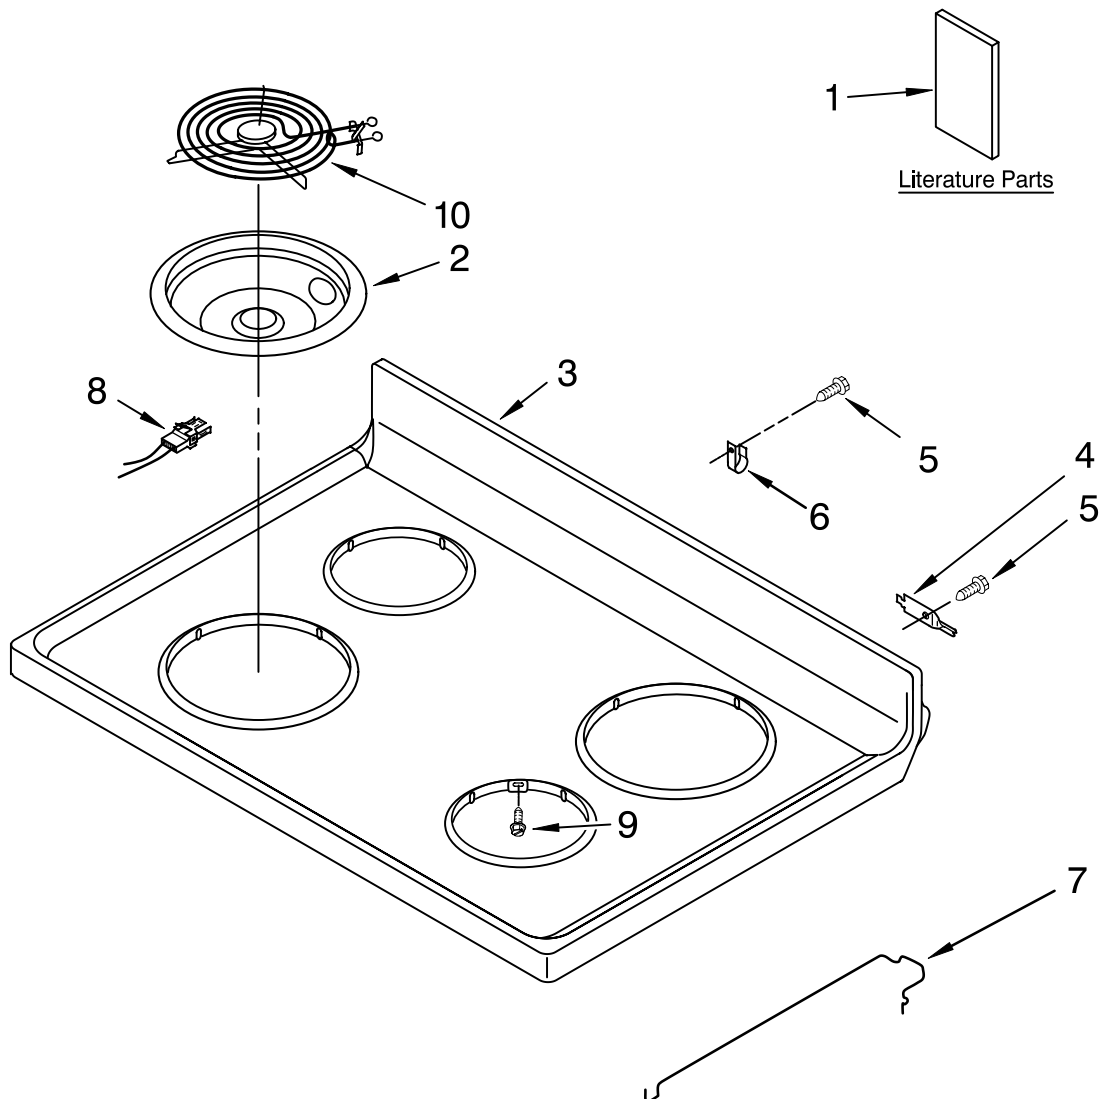

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10200356	Owners Manual
	W10196159	Tech Sheet
	W10141166	Instructions, Installation Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2		Bowl, Drip
	3195208	6" Chrome
	3195209	8" Chrome
3		Cooktop
	3186231	White
	3186233	Black
4		Hinge, Cooktop (2)
	3195060	

Illus. No.	Part No.	DESCRIPTION
5		Screw
	3196178	
6		Strain Relief
	308605	
7		Rod, Support (2)
	3195812	
8		Receptacle, Elmnt
	814399	
9		Screw
	3196154	
10		Element, Surface
	9761347	6" (2)
	9761345	8" (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: RF264LXSQ3, RF264LXSB3  
(Designer White) (Black)

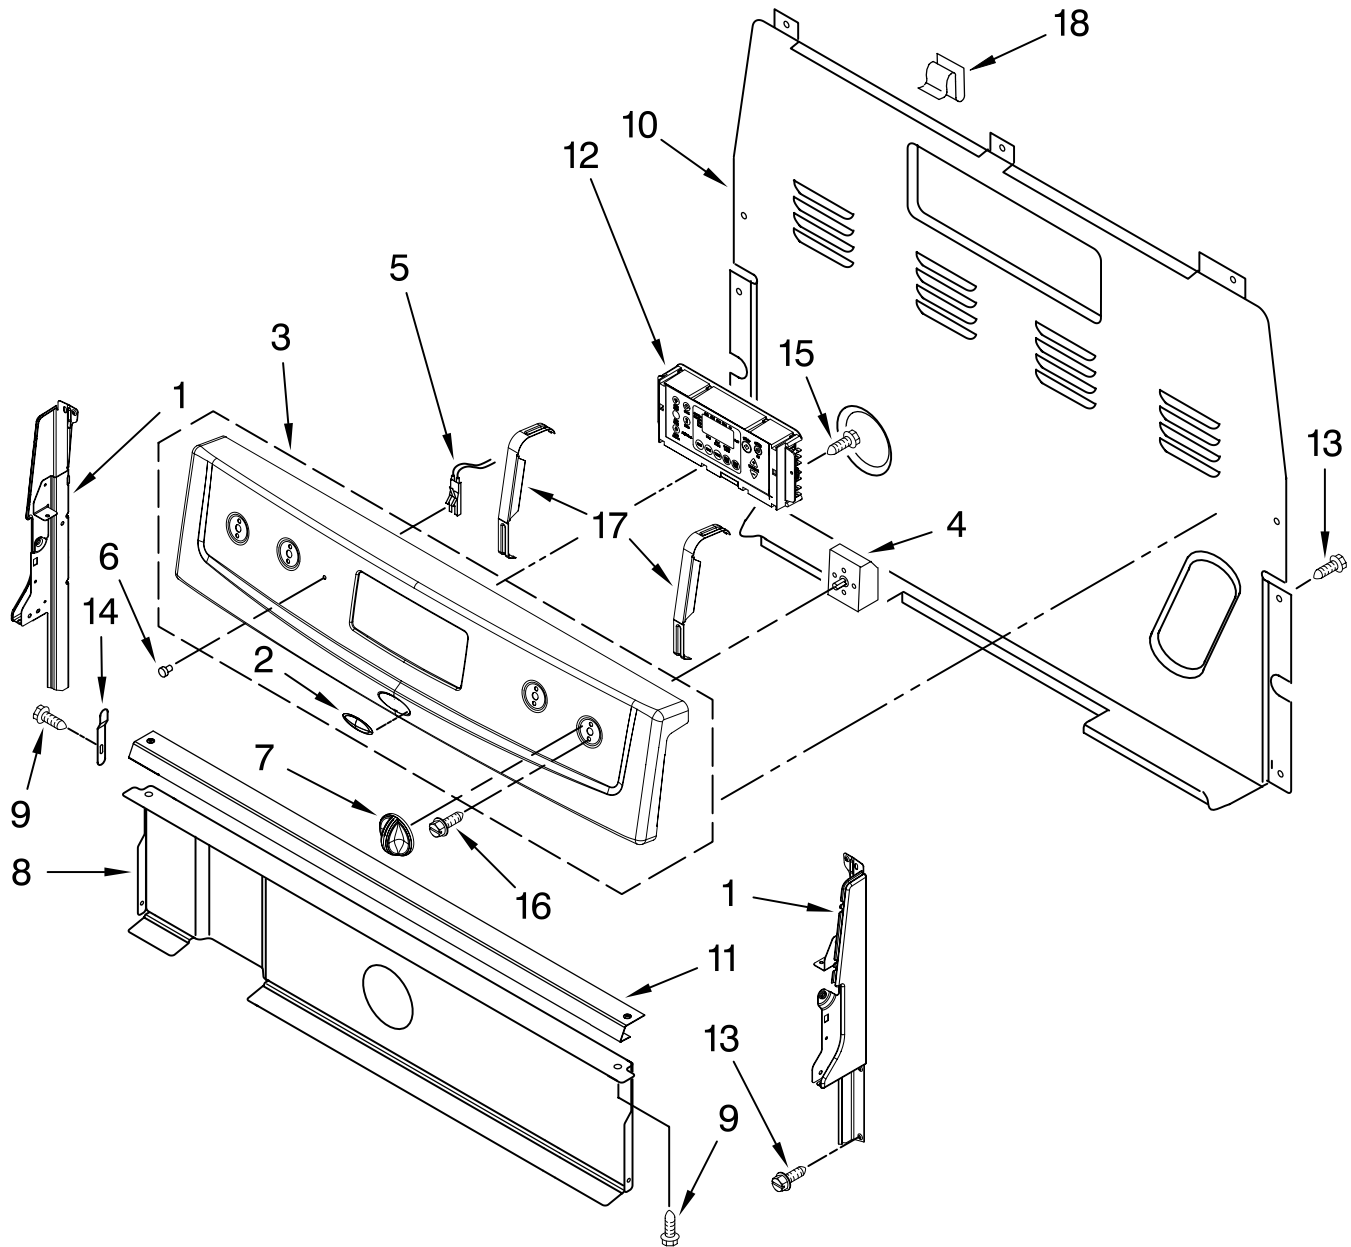

Illus. No.	Part No.	DESCRIPTION
1	W10009080	Endcap Black Left Hand
	W10009090	Black Right Hand
	W10009040	White Left Hand
	W10009050	White Right Hand
2	9757609	Nameplate
3		Panel, Control
	9762083	Black
	9762081	White


Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	3148954	Left Front
	3148952	Left Rear
	3148954	Right Rear
	3148952	Right Front
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9761964	Black
	9761962	White
8	8053912	Shield, Heat

Illus. No.	Part No.	DESCRIPTION
9	3196166	Screw
10	8272473	Cover, Upper
11	W10182322	Brkt-Mntg, Console
12		Control, Range
	W10108100	Black
	W10108090	White
13	3196178	Screw
14	3196200	Clip, Spring
15	3196169	Screw
16	3400882	Screw
17	9762078	Brkt-Mntg, EOC
18	8273564	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF264LXSQ3, RF264LXSB3  
(Designer White) (Black)

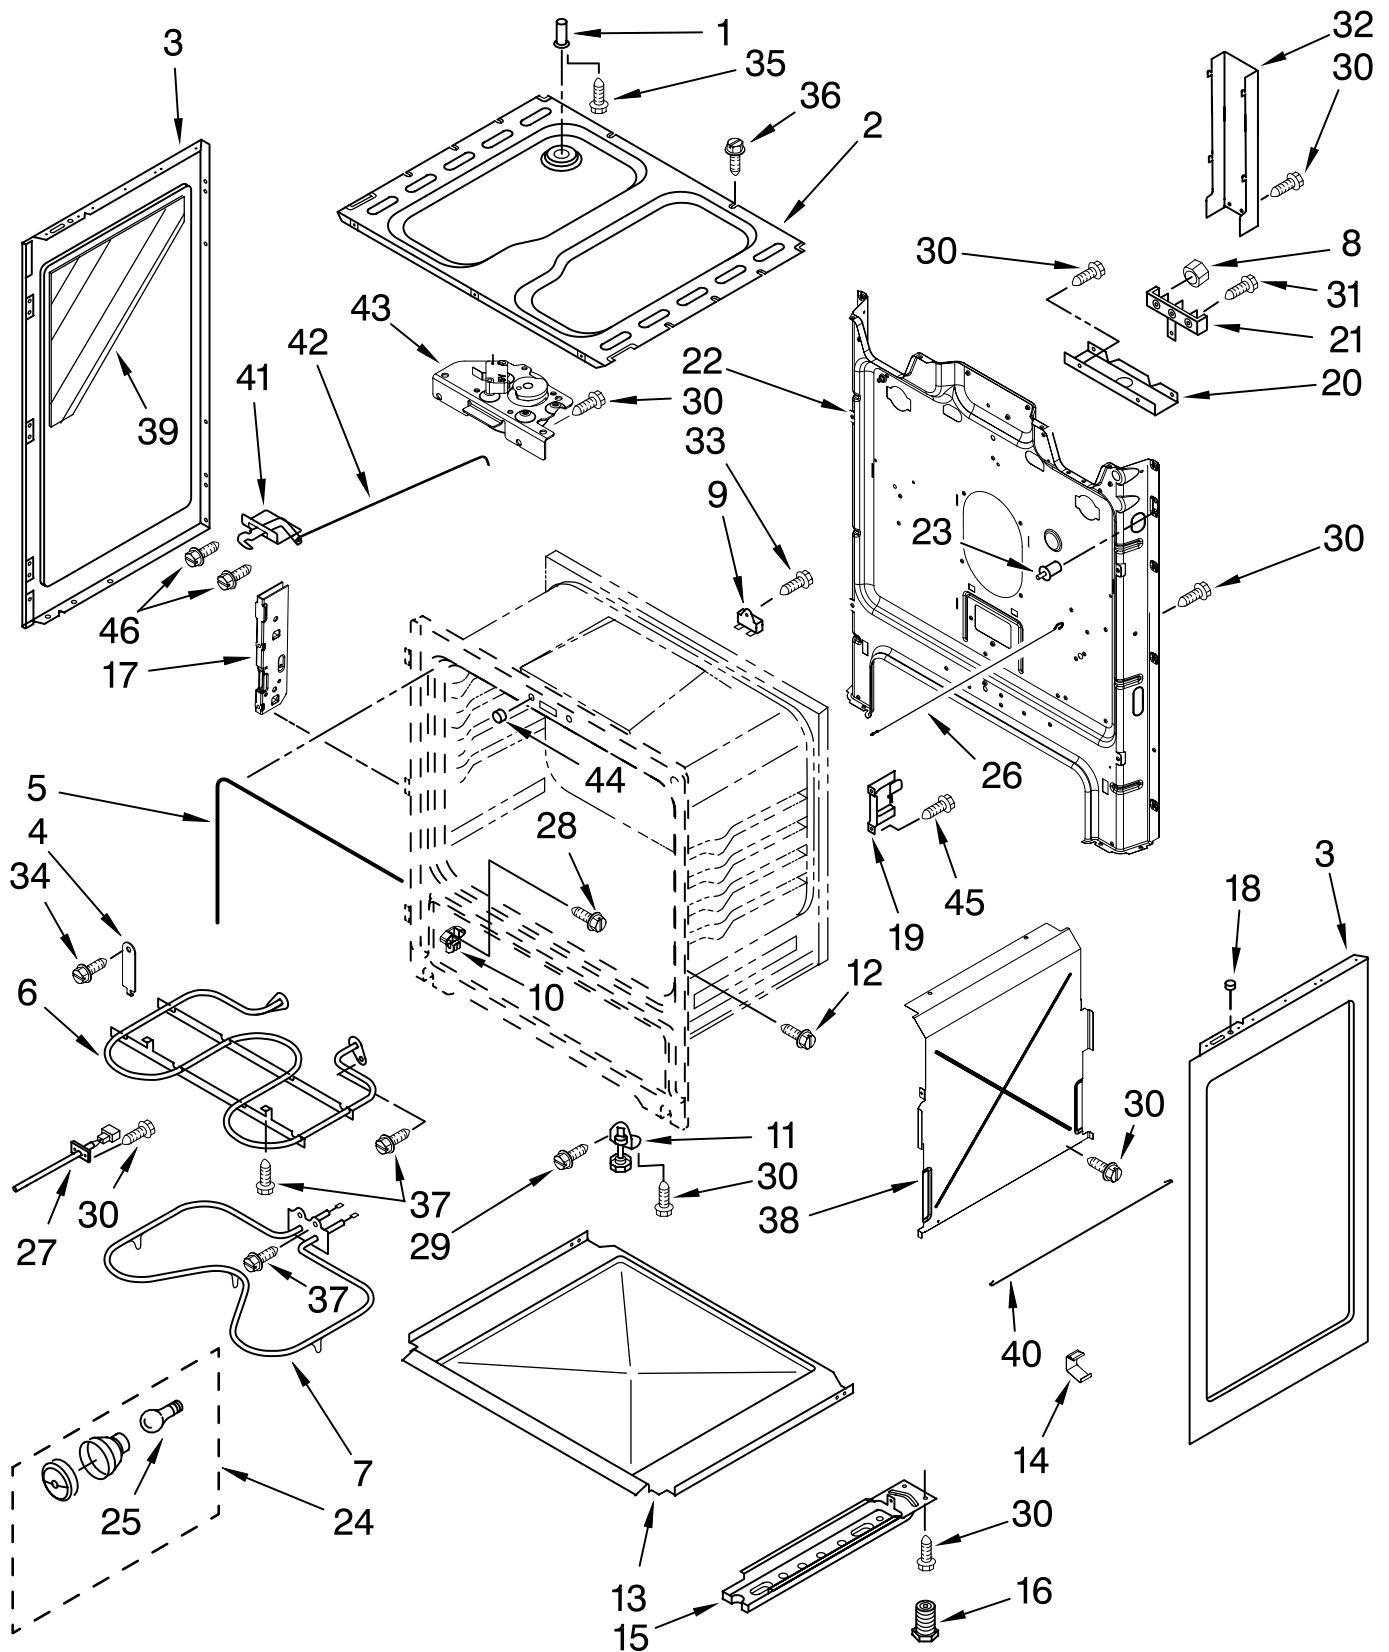

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CHASSIS PARTS

For Models: RF264LXSQ3, RF264LXSB3  
(Designer White) (Black)


Illus. No.	Part No.	DESCRIPTION
1	9755804	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
	8053832	Black
4	9761517	Clip, Door Mntg(2)
5	8522416	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	112432	Nut (3)
9	3196548	Fuse, Thermal
10	W10114344	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12	W10067840	Screw
13	8054068	Tray, Insulation
14	W10137382	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	W10058460	Foot, Rear (2)
17	9760407	Brkt-Mntg,Dr Hinge
18	3195809	Bumper, Side (2)
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9757239	Rod, Door Switch Rear Mount
27	W10181986	Sensor, Oven
28	3196165	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	9758283	Cover, Box
33	3196172	Screw
34	W10031780	Screw
35	3196567	Screw
36	3196168	Screw
37	3196174	Screw
38	9758238	Retainer, Side (2)
39	W10182346	Insulation
40	W10196451	Rod, Insl Retainer
41	9761013	Latch, Door
42	W10078380	Rod, Latch
43	W10107820	Latch Asy, Rear
44	9758701	Spacer, Door
45	3196169	Screw
46	3196560	Screw (2)

## INSULATION

8272616 Insulation, Wrap  
8272612 Insulation, Back

# DRAWER & BROILER PARTS

For Models: RF264LXSQ3, RF264LXSB3  
(Designer White) (Black)

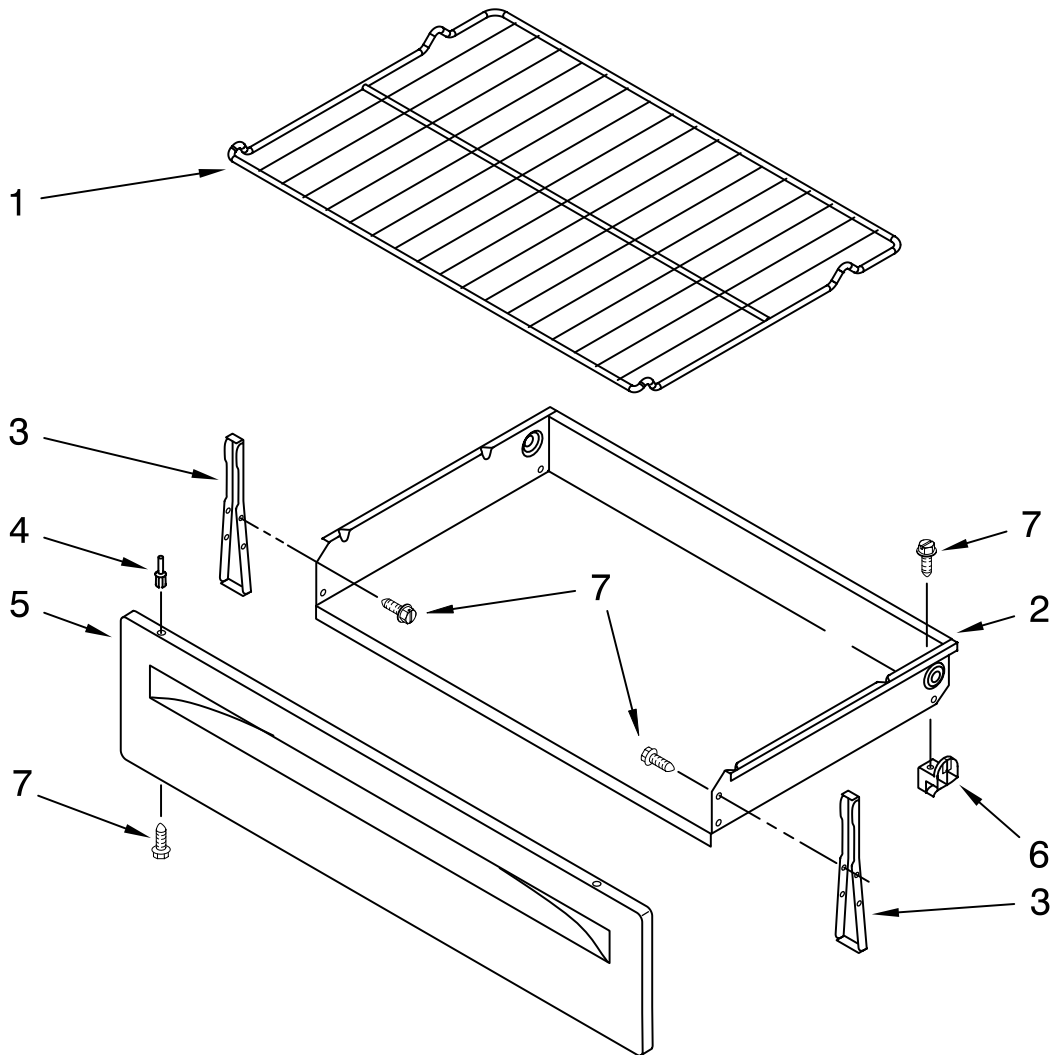


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

- |   |           |                    |
|---|-----------|--------------------|
| 1 | W10138079 | Rack, Oven (2)     |
| 2 | 9761031   | Drawer, Storage    |
| 3 | W10174396 | Bracket, Drawer(2) |
| 4 |           | Rivet, Push (2)    |
|   | 3196814   | White              |
|   | 3196813   | Black              |
| 5 |           | Panel, Drawer Frnt |
|   | 8053339   | White              |
|   | 8053341   | Black              |
| 6 | 8053334   | Glide, Drawer (2)  |
| 7 | 3196168   | Screw              |

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: RF264LXSQ3, RF264LXSB3  
(Designer White) (Black)

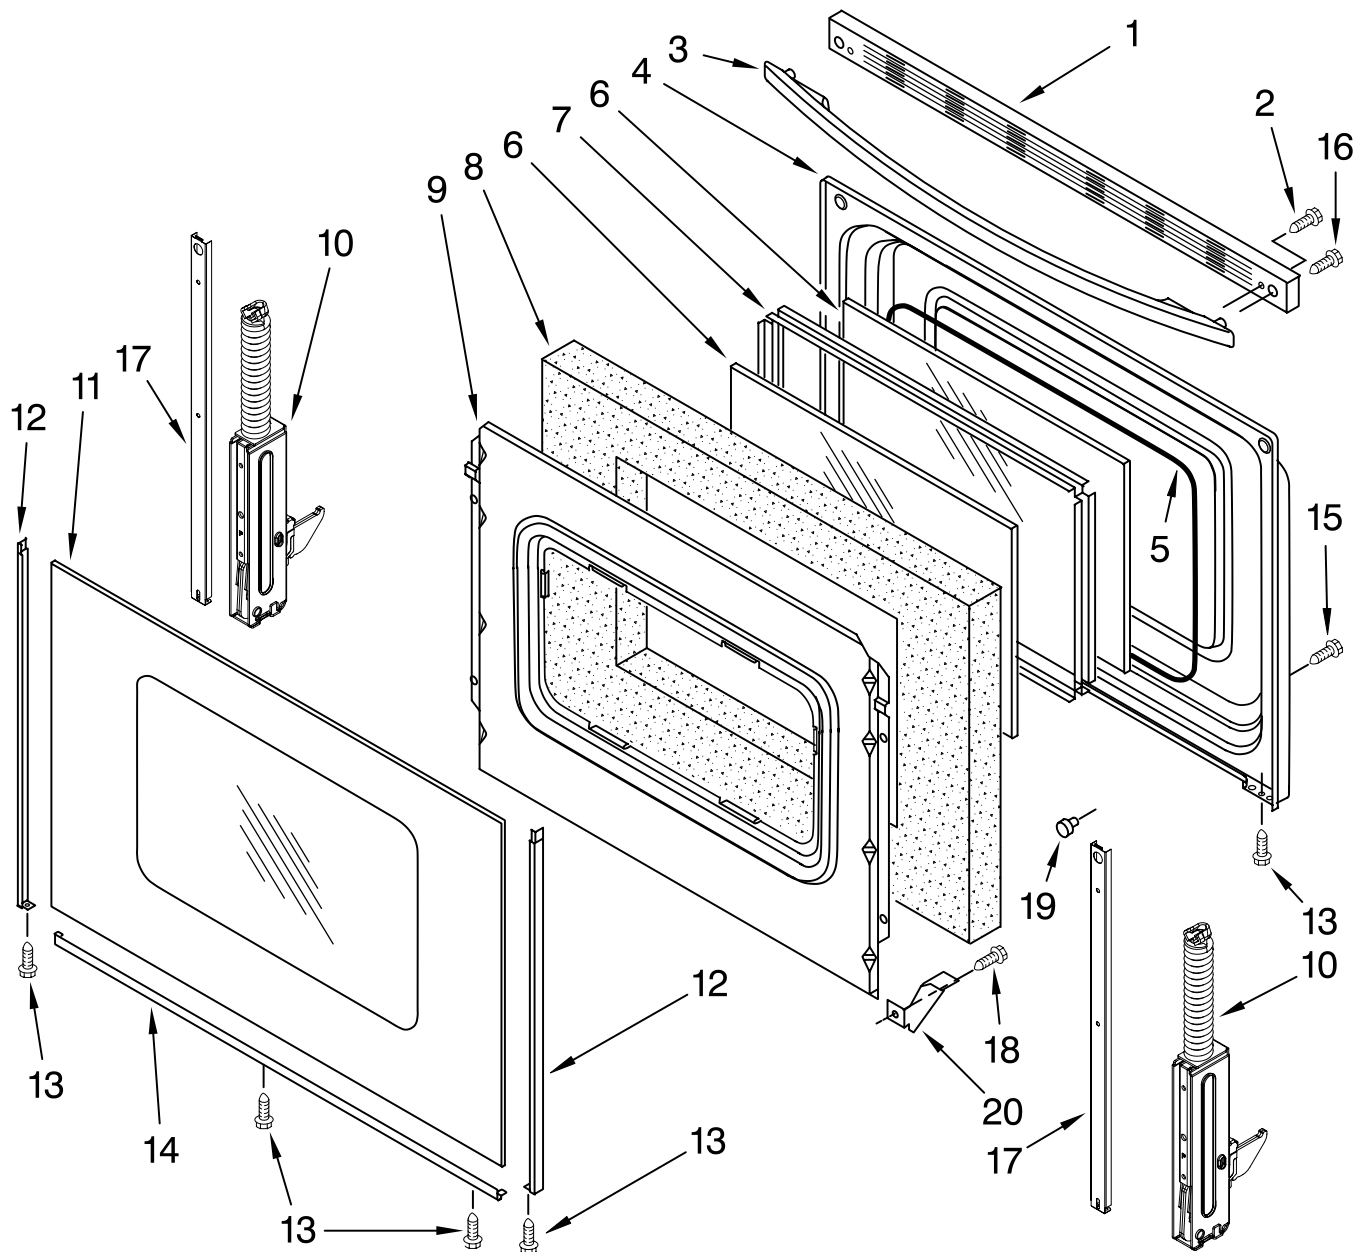

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

1	W10144870	Black
	W10144869	White
2	W10168559	Screw
3	W10118385	Black
	w10118384	White
4	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

9	9761357	Retainer, Insul.
10	9761493	Hinge, Door (2)
11	W10118455	Black
	W10118454	White
12	8523171	Black Left Hand
	8523165	Black Right Hand
	8523166	White Left Hand
	8523172	White Right Hand

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

13	3196160	Screw
14	8523177	Black
	8523175	White
15	W10031790	Screw
16	W10178180	Screw
17	W10113759	Strap, Door
18	3196165	Screw
19	3195809	Bumper, Door (2)
20	3196794	Bracket, Window(2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Models: RF264LXSQ3, RF264LXSB3  
(Designer White) (Black)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Parts Not Illustrated and  
Optional Parts (Not Included)

## SPLICING WIRES--25FT.

### LENGTH

242828	Wire, Black
	12 Ga. 150° c
242821	Wire, Blue
	14 Ga. 150°c
242822	Wire, Brown
	14 Ga. 150°c
242830	Wire, Brown
	14 Ga. 200°c
242823	Wire, Green
	14 Ga. 150°c
242824	Wire, Orange
	14 Ga. 150°c
242825	Wire, Red
	14 Ga. 150°c
242831	Wire, Red
	14 Ga. 200°c
242827	Wire, Yellow
	14 Ga. 150°c

## REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

## PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

## PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

## PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass
4396923	Broiler Pan Assy

## ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

## WIRING HARNESS PARTS

W10114335	Harness, Wire (Main)
W10084660	Harness, Wire Door Switch/Sensor
9761476	Harness, Wire (Surface Unit)
311227	Wire, Ground
3196154	Screw
313660	Clip, Wire Ground
3196173	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST